
F4298 INSTALLATION INSTRUCTIONS



WARNING

DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE. READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.

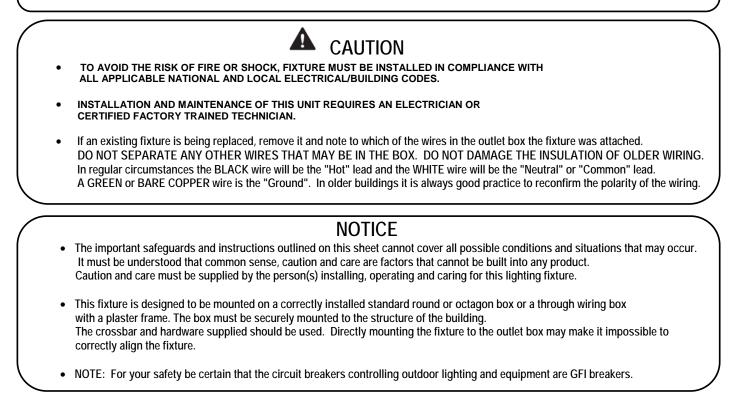

FIXTURE PREPARATION

1. Remove the fixture, parts and parts bag(s) from the carton.

NOTICE:


Before discarding the carton, double check to make certain that all parts are found.

FIXTURE INSTALLATION

NOTICE: THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

New construction: Double check that APPROVED BOX and SUPPORT were correctly installed following the manufacturers instructions. Remodeling (with enclosed ceiling) Install APPROVED BOX and SUPPORT following manufacturer's instructions.

- Slide crimp-on cable clamps onto the SAFETY CABLE. The outlet box may have to be removed for this step. Loop the SAFETY CABLE over the structure or brace. Thread the long end of the SAFETY CABLE back through the crimp-on cable clamps. Adjust the cable and tightly set the clamps. Thread the SAFETY CABLE into the outlet box (from the top). Reinstall the outlet box if necessary.
- Attach the crossbar to the 10-24 STUDS in the outlet box. DO NOT USE THE BOX "EARS" Thread nipple into the crossbar and hex nut onto the nipple. Place the canopy against the ceiling. Adjust the nipple so that 1/4" of thread is exposed beyond the canopy. Tighten the hex nut against the crossbar.

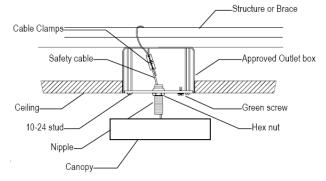

SEE PAGE 2 FOR SUGGESTED FIELD CONSTRUCTED SUPPORT

- Thread the SAFETY CABLE down through one of the nipple and screwcollar loop. Temporarily install the canopy.
- 4. Determine the overall desired length of the fixture. Guide the leads and ground wire from stems, ball swivel to the center of canopy. Measure 6" of lead and ground wire beyond the center of the fixture. Cut off excess wire. Strip the insulation off the ends of the leads exposing approx. 1/2" of wire. Twist the strands of wire together.
- 5. Thread the 2 longest screws into the mounting ring and the hext nut onto the screws (The green ground screw is the front). Adjust the screws so that they extend 3/16" beyond the canopy of the fixture. Lock the hex nuts against the mounting ring
- 6. Attach the mounting ring to the outlet box. (The green screw should face the floor).
- 7. Fasten the ground wire to the green or bare copper wire in the outlet box or to the green screw on the crossbar.

WARNING

Never fasten the ground wire to the black or "hot" wire! Failure to follow this instruction could result in serious injury or death!

Fasten the white fixture lead to the white wire in the outlet box.
 Fasten the wires together with an approved fastener (wire nut).
 Starting about 1' below the fastener, tightly wrap the connection with electrical tape so that the connection seals the end of the fastener.

WARNING Make sure that there is no exposed wire or strands that could cause a dangerous short circuit!

—electrical tape



- Connect the black fixture lead to the black wire in the outlet box. Fasten the joined wires as in step 8.
- Place the canopy of the fixture over the screws and against the ceiling. Adjust the screws so that they extend 3/16" beyond the canopy of the fixture. Lock the end nuts against the mounting ring.
- 11. Place the glass into the fitter well. Tighten the socket ring
- Install the lamps (light bulbs).
 NOTE: This fixture is rated for Max 60 watt type A or early electric lamps

WARNING DO NOT EXCEED RECOMMENDED WATTAGE!

13. Restore power to circuit at breaker or fuse box.

